Printer Setup for Remote Desktop Client

In low bandwidth situations the mSupply client can become laggy and unstable, in these cases it may be recommended to use RDP through the Windows Server Remote Desktop Client application. If the site is dispensing and using a printer, this introduces some complicated steps.

Requirements

At dispensary: - A computer **with serial/com port** and with RDP access to server - A Zebra printer with serial/com port

Server/machine that is remoted to: - mSupply Client installed and can connect to mSupply server -Windows server installed that has Remote Desktop Client


Setup the remote Windows Server Machine

Use Windows Run to run *tsconfig.msc* and *gpedit.msc*.

- In the tsconfig window, right click on "RDP-Tcp" and click "properties". Go to client settings and make sure that the COM port is unchecked in "Redirection - disable the following" list.

Remote Desktop Session Hos	t Configuration
File Action View Help	
(= -) T	
କ୍ଲି RD Session Host Configuration: । ହୁଲି Licensing Diagnosis	Configuration for Remote Desktop Session Host server: CKMOHTS1 You can use Remote Desktop Session Host Configuration to configure settings for new connections, modify the settings of existing connections, and delete connections. You can configure settings on a per-connection basis, or for the RD Session Host server as a whole.
	Connection Name Connection Type Transport Encryption Comment
	BPP-Tcp Microsoft RDP 7.1 tcp Client Competible
	RDP-TCp Properties General Log on Settings Remote Control Clernt Settings Network Adapter Security Color Depth Color Depth Ibits per pixel Monitor Settings Limit Maximum number of monitors per session Ice Disable the following Ice Dive Viridows Printer Viridows Printer Viridows Printer Viridows Printer Clipbaard Audio net ording Supported Plug and Play Devices Default to main clernt printer
	OK Cancel Apply

- In the gpedit window, follow the hierarchy shown below and make sure "Do not allow COM port redirection" is disabled (not configured probably fine).

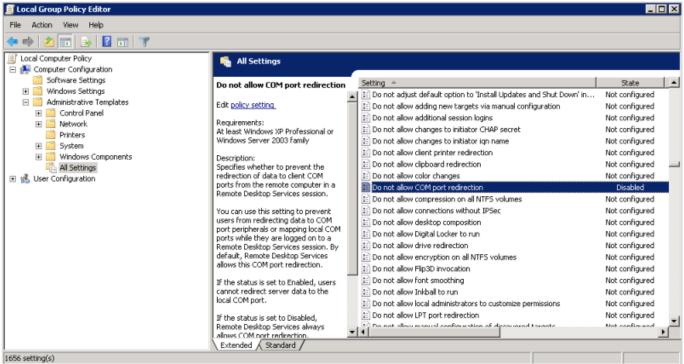


Setup the local Machine

- The machine that you will be dispensing from needs to have the appropriate Zebra printer. - Check that your printer has a 9 pin serial/com port on the rear - Check your Computer also has a 9 pin serial/com port (right most port below).



- You can verify that the computer has detected its external ports via device manager

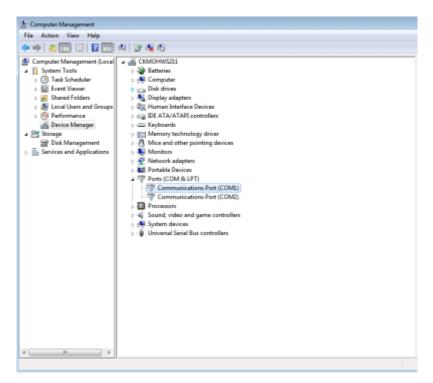

- Using a RS232 serial cable, plug the printer into the computer.

Caution: If you have a cable that has the female plug at both ends, it is likely a *Null Modem* cable. This cable will not work (even with adapter).

- If you have mSupply available locally on the machine, you can try testing printing a label to confirm your local setup is correct using *misc. labels* in the special menu.

- Enable port sharing on the remote machine in Remote Desktop Client for the machine you are going to remote into.

Nemote Desktop Connection	- •	×
Remote Desktop Connection		
General Display Local Resources Programs Experience Remote audio Configure remote audio settings. Settings Settings Keyboard Apply Windows key combinations: Only when using the full screen Example: ALT+TAB Local devices and resources that you want your remote session. Image: Write Section 1. Image: Write Section 1. Image: Write Section 1. Image: Write Section 1. <td< th=""><th>• •</th><th></th></td<>	• •	
B Remote Desktop Connection		8
Remote Desktop		
Local devices and resources Choose the devices and resources on this computer that you use in your remote session. ✓ Smart cards ✓ Ports	ı want to	
Which devices can I use in my remote session?		
ОК	Cance	el

Open mSupply Client in the rdc window and test printing, hopefully it works!

From: https://docs.msupply.org.nz/ - mSupply documentation wiki

Permanent link: https://docs.msupply.org.nz/dispensing:printer_setup_for_rdc?rev=151963 1816



Last update: 2018/02/26 07:56